

BRAVAT

BY DIETSCHE  1873

产品安装说明书


PRODUCTS INSTALLATION INSTRUCTIONS

型号: B25733TW-3W/B25733TW-3K

品名: 1.7米气泡浴缸

Model: B25733TW-3W/B25733TW-3K

Description: 1.7m Air Massage Bathtub

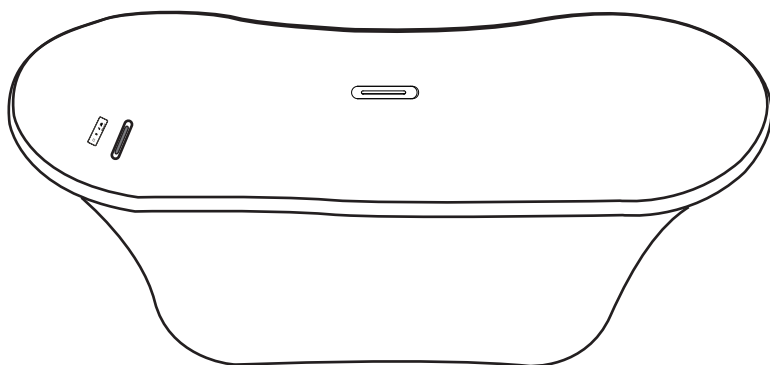

- 1、规格: 1700×755×680mm
- 2、产品材料: 压克力
- 3、满水容量为: 170升 (至溢水口)
- 4、独有210个密集喷孔, 全方位的平衡按摩体验;
- 5、可调气流强度, 自由调节按摩程度;
- 6、“贴身”喷孔设计, 外形美观, 躺浴更舒适;
- 7、智能清洁系统, 健康有保证;


- 1.Dimensions: 1700×755×680mm
- 2.Material: Acrylic
- 3.Full water volume is 170L (up to overflow outlet)
- 4.Innovative 210 intensive airjets, all-encompassing balanced body massage experience.
- 5.Adjustable airflow, free massage intensity setting.
- 6.BODY-CONTOUR airjet design, aesthetic outline, comfortable and ideal for lying bath.
- 7.Smart cleaning system, ensure hygienic and healthy.

A

安装尺寸图

INSTALLATION DIMENSIONS

单位:mm
Unit:mm

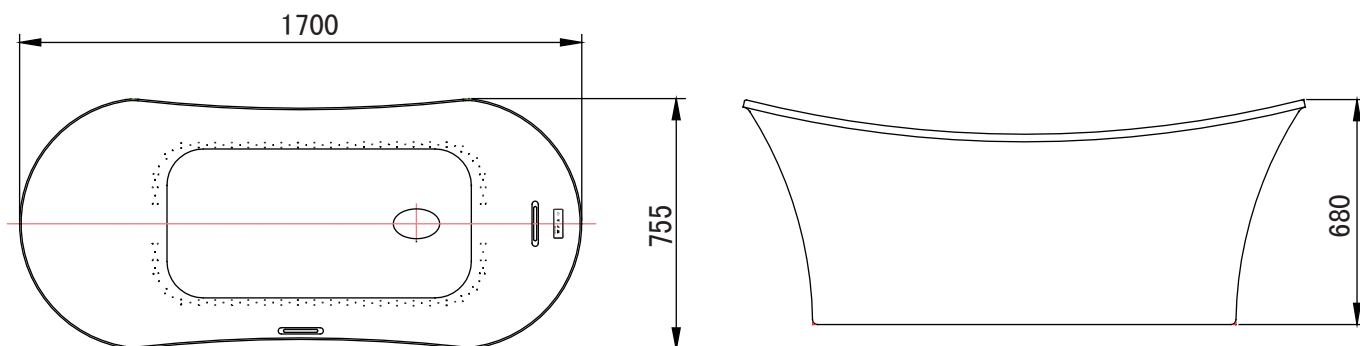

B

备用工具

HELPFUL TOOLS

扳手
Adjustable Wrench



墨斗与铅笔
Marking Gauge and Pencil




卷尺
Tape Measure



防霉中性硅胶
Neutral Mildew Resistant
Silicone Sealant



水平尺
Level

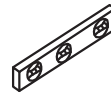

防护眼镜
Safety Glasses



C

功能配置及技术参数

CONFIGURATION AND PARAMETERS

工作条件及特性			
额定电压	AC220V~AC240V	额定频率	50HZ
额定电流	12A	额定功率	900W
绝缘电阻	>20MΩ	漏电电流	30mA
防水等级	IPX5	漏电保护电流	15mA
负载配置参数			
负载类别	额定负载电压	额定负载频率	其它
气泵	230V	600W	
发热片	230V	300W	

Operating Conditions and Properties			
Rated voltage	AC220V~AC240V	Rated Frequency	50HZ
Rated Amperage	12A	Rated Wattage	900W
Insulation resistance	>20MΩ	Leakage Current	30mA
Water-Resistant Grade	IPX5	Leakage current protection	15mA
Load configuration parameters			
Type of Load	Rated Loading Voltage	Rated Loading Frequency	Others
Air Pump	230V	600W	
Heater	230V	300W	

D

注意事项

POINTS FOR ATTENTION BEFORE INSTALLATION

- 为了方便运输和防止运输造成的损坏，每一只浴缸均包装在纸箱内。但是，为了保证产品的质量，请您在安装前仔细检查产品的质量。如在安装后再提出与以下内容有关的质量问题，这将在不包括在我们的责任范围内。
- 安装前，请仔细阅读本手册，并正确施工。
- 请按本说明书内记载的方法施工。擅自变更施工方法所引起的不良后果，本公司将不负责所引起之损失。
- 需请专业人员施工。
- 安装之前先切断电源。
- 安装前请保持气泵周围区域清洁，没有任何残留物，以防止这些残留物可能导致气泵通风口堵塞，从而使通过气泵的气流不畅。

检查

- 在您收到浴缸打开包装箱后，检查开关和所有的配件是否完好。
- 请检查浴缸表面是否有任何撞击或破损的现象。
- 请检查管道口是否紧密牢固。
- 在正式安装前，请检查是否因运输造成浴缸漏水。检查所有的接口和配件是否漏水，渗水。

安装注意事项

- 我们建议您为了方便维修和清洁，请将按摩浴缸安装在瓷砖已经贴好的台面和地砖已经贴好的地坪上。
- 为了便于安装和检修浴缸的排水系统，控制系统和风泵等重要

- To facilitate transportation and protect product from damage that may occur in delivery, each bathtub is packed in cartons. In order to avoid quality dispute, please kindly check product before installation. Or Bravat should not be liable for any quality issue raised after installation.
- Please read the instruction carefully before beginning to install.
- Please follow steps in the instruction to install this product or may result in costly mistake. Bravat shall not be responsible for any loss from that mistake.
- Professional help is required for installation of this product.
- Shut off power supply before installation.
- Keep the area around the Air Pump clean and free of debris, to prevent air duct clog of pump and restriction of air flow through Air Pump.

Inspection

- Check and ensure all switch and accessories are in good condition.
- Check and ensure bathtub surface is free of hit and damage.
- Check and ensure pipe connection is firm and compact.
- Before starting installation, check and ensure bathtub, all connections and accessories are free of leaks that may occur during delivery.

Attention points at Installation

- To facilitate maintenance and clean, we recommend to install bathtub on finished floor with ceramic tile or terrace with ground tile.
- To facilitate install and maintenance bathtub's key parts like drainage system, control system and air pump, DON'T wall up bathtub with cement or tiles.

部件，请不要将浴缸用水泥及瓷砖将其封死。

- (3) 搬运浴缸时，严禁提拉管道或将管道作为提手。
- (4) 施工过程中，请不要将浴缸表面的保护膜撕开。
- (5) 将墙，地砖的工程完全结束后，再将浴缸从包装箱中取出进行安装。
- (6) 施工时，严禁将灯泡，明火置于浴缸内。
- (7) 施工时，严禁在浴缸内放置黄沙，水泥及其它容易损坏缸体表面的杂物。
- (8) 施工时，严禁向浴缸内倾倒油漆，胶水等溶剂。

泡泡浴缸电器安装注意事项：

- (1) 风泵电源线的连接，必须由专业电工按照标准进行。
- (2) 连接的专用的电源必须安装漏电、过载、短路保护装置，漏电、过载、短路装置应经常检查。
- (3) 接地线必须严格接地。
- (4) 电源必须在电机比较近的地方，严禁使用临时接线板。

- (3) DON'T lift pipes or use pipes as lift when transport bathtub.
- (4) DON'T remove bathtub protecting film during installation.
- (5) DON'T take bathtub out of package for installation until wall and floor preparation finished.
- (6) NO bulbs and open fires are allowed to place in bathtub during installation.
- (7) NO stuff like sand, cement or other sundries are allowed to place in bathtub as that would likely damage bathtub surface.
- (8) NO solvent like paint or glue are allowed to contact with bathtub.

Attentions at installation of electrical appliances

- (1) Professional help from electrician is required to connect power cord of air pump with reference to standards.
- (2) Exclusive power source for bathtub must have protective device of creepage, overload and short circuit installed and checked frequently.
- (3) Earth wire must be earthed.
- (4) Power source must close to electric motors, NO temporary extended socket is allowed to use.

E 使用说明

OPERATION INSTRUCTIONS

(一)、开关机

接通电源，触摸面板  键，开启系统，开关机键橙色背光点亮，灯光键的白色背光点亮。发光喷嘴为白色；再次触摸面板  键或者定时时间到时，关闭所有功能和按键背光。运行定时：系统默认定时 20 分钟。关机状态下，触摸  键 1 秒，风泵键和灯光键白色背光同时亮，则取消定时；再次触摸，橙色背光同时亮，则设置定时，重新开机设置生效。

(二)、背热功能

系统开启的情况下，触摸  键开启背热功能，按键橙色背光点亮；再次触摸此键关闭背热功能，按键背光灭。

(三)、气泡按摩功能

系统开启的情况下，触摸  键开启风泵定速功能，工作在最大功率，按键白色背光点亮；再次触摸  键开启风泵变速功能，按键橙色背光点亮；第三次触摸  键，关闭风泵功能，按键背光灭。在风泵开启的过程中，触摸  键 1 秒，风泵可以在定速和变速功能切换。

自动排污：关机状态下，触摸  键 1 秒，风泵键橙色背光点亮，风泵工作在最大风力，时间 3 分钟。

(四)、灯光

系统开启的情况下，触摸  键启动灯光 12 种颜色手动变色功能，每触摸一次，灯光变换一种颜色。灯光按键白色光点亮。触摸  键 1 秒，启动灯光自动变色功能，灯光按键橙色背光亮。

(1) Power On/Off

Switch the power on, touch the icon  on the panel to turn the system on. Then the orange backlight of the power icon and the white backlight of the lamp icon will be lit. The light of the nozzle is shining white. Touching the icon  again or turning time out, all the functions and button backlight will be turned off. Operation timing: The default setting time of the system is 20 minutes. The system turns off, by touching and keeping the icon  for one second, the backlight of the air pump icon and lamp icon will be lit simultaneously and the timing will be cancelled; touch the icon again, the orange backlight will be lit simultaneously, and the timing is set. The settings become valid when you restart the machine.

(2) Backup Heating Function

Turn the system on, touch the icon  to start the function of backup heating, then the orange backlight of the icon will be lit; touch the icon again, the function of backup heating and the backlight of the icon will be turned off.

(3) Air Bubble Massage


Turn the system on, touch the icon  to turn on the function of keeping the speed of the air pump; the air pump will run at its maximum power and the white backlight of the icon will be lit; touch the icon  again to turn on the function of regulating the speed of the air pump and the orange backlight of the icon will be lit; touch the icon  for the third time to turn off the function of air pump, then the backlight of the icon will be turned off. During the process of turning the air pump on, the function of air pump can be shifted between speed maintaining and regulating, by touching and keeping the icon  for one second.

Automatic drainage: Turn the system off, the orange backlight of the air pump icon will be lit by touching and keeping the icon  for one second, the air pump will work at its maximum power for three minutes.


(4) Lamp

Turn the system on, touch the icon  to turn on the manual function of 12-color lamp conversion. Touch the icon each time, the lamp will be changed into a different color and the white light of lamp icon will be lit. Touch and keep the icon  for one second to turn on the lamp function of automatic color conversion and the orange backlight of the lamp icon will be lit.

电控面板

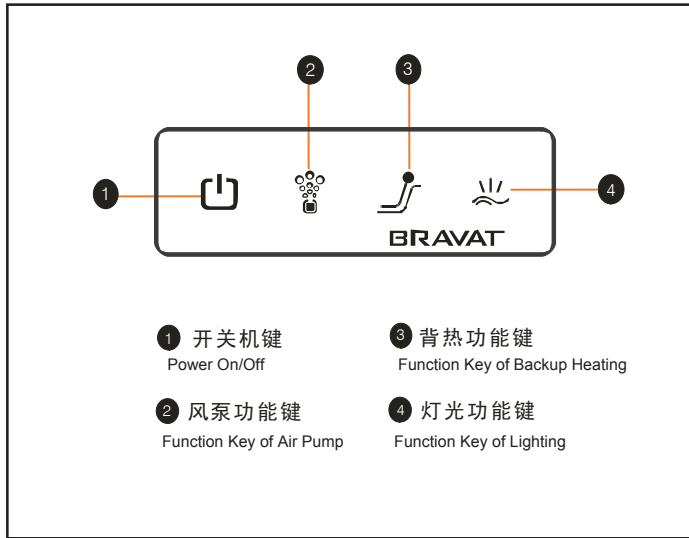

接线图

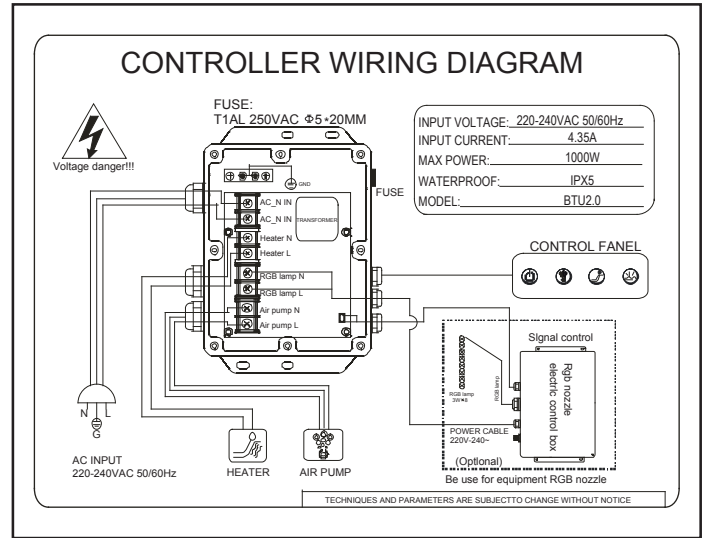


F


安装步骤

INSTALLATION STEP


- 安装施工前, 请在地面上布施下水管道, 定位电源插座, 冷热进水管。图中冷热水管的尺寸, 请按具体施工时浴缸边缘距墙面的距离、确定。电源插座离地面高度不低于20cm, 并且需靠电机一侧。(注: 排水管需突出地面30mm)
- Please embed supply lines, drainage lines, and power socket according to distance from bathtub rim to finished wall. Power socket should be located above 20cm from finished floor and close to bathtub motor. (Drainage outlet should be 30mm protruding from finished floor)

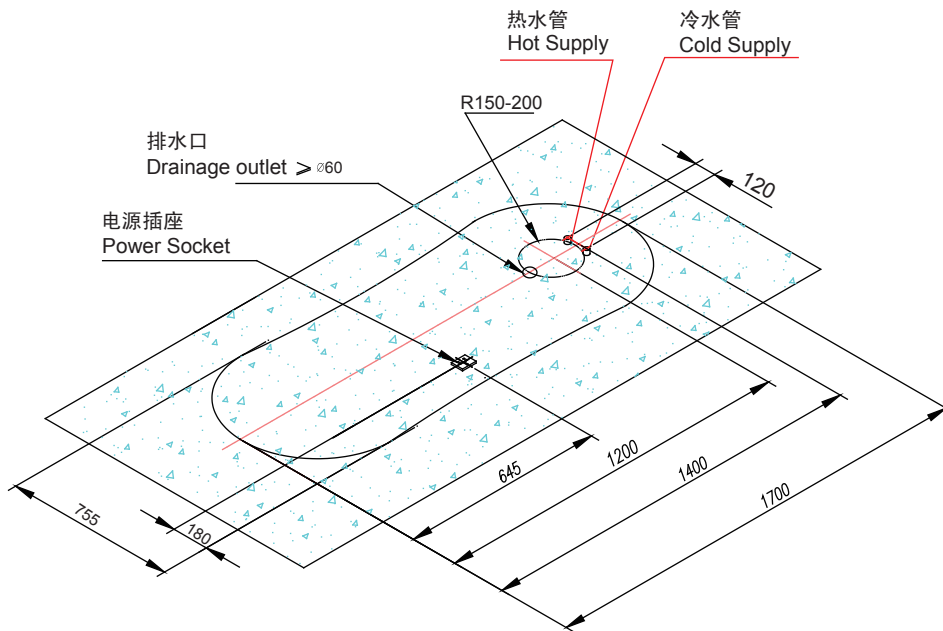

- 调节浴缸支脚高度, 将浴缸上缘面调至水平, 同时所有支脚完全支撑在地面上。
- Adjust leveling feet to keep top rims at horizon, and ensure all feet firmly seat on floor at the same time.

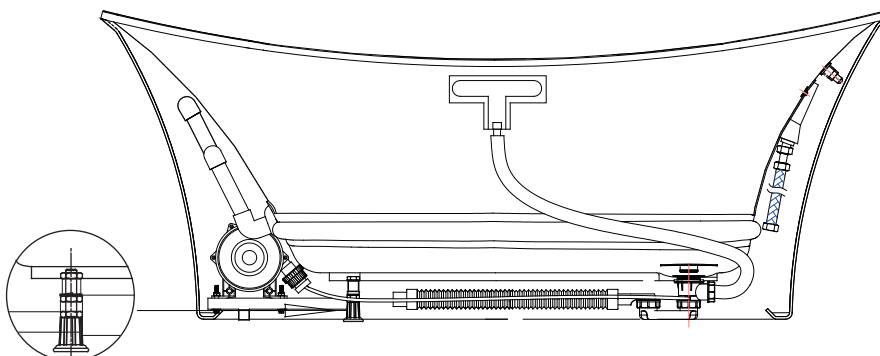

- 安装排水管：依排水管的安装说明书将排水管安装在浴缸上。

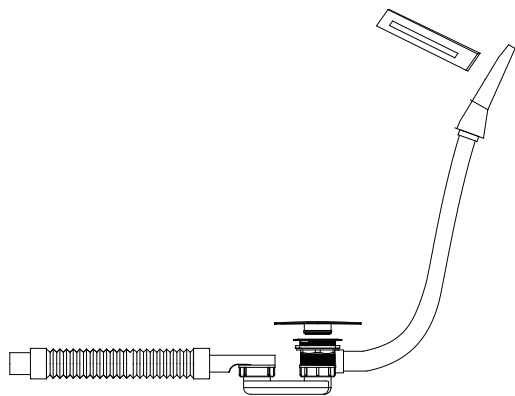


- 关闭排水，注水入浴缸，检查是否有渗漏。确保溢流接头处均不渗漏。

- 安装施工前，请参考安装尺寸图，在地面上布施下水管道，定位电源插座，冷热进水管。具体的施工请找专业水电工完成。

- 地排式排水的排水口建议定位在在离浴缸排水口半径180mm的圆线上为宜。（推荐使用地排式排水）

- Installation of drain pipes: Install the drain pipes to the bathtub according to the installation instructions of the drain pipes .

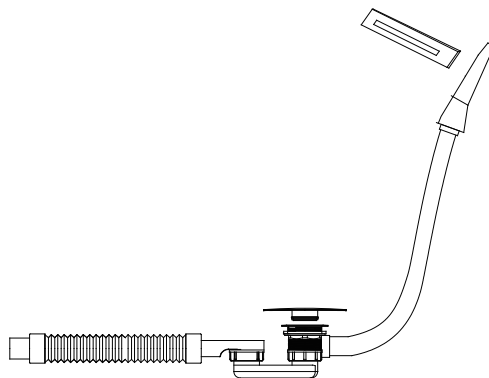

- Switch off the water drainage, pour water into the bathtub, and then check whether there is water leakage. Make sure that the overflow adapter is leak-proof.

- Before installation, please refer to the installation diagram. Lay water pipes on the floor, position the power outlet and hot/cold water inlet pipes. Please ask a professional plumber to complete the actual construction.

- If the drainage through the floor is used, the height of the drain outlet is recommended to be 180 mm above from the drain outlet. (Drainage through the floor is recommended.)

G 维护与保养

MAINTENANCE

- 1、为使浴缸干净整洁，建议您在沐浴后，趁水刚放完而浴缸还没干的时候立即清洁浴缸，这时候很容易将肥皂、人体脂肪及污垢等清除，以免污垢粘在浴缸上干结后不便清洁。
- 2、在水质较硬的地区，由于水中钙的含量高，污垢粘在浴缸壁上会留下黄色的斑痕，所以请您经常清洁浴缸。
- 3、清洁时，使用柔软的布配以中性清洁剂或肥皂水清洗，然后将水份擦干。

1. Suggest to clean bathtub immediately after drainage complete, as soap, body fat and dirt are easy to be removed at the time before bathtub dry.
2. Suggest to clean bathtub frequently if using in high hard water area, where high calcium content in water would leave yellow spot after dirt attaching on bathtub surface.
3. Please use soft cloth with neutral cleaner or soap to clean bathtub, and then wipe its surface to dry.

- 4、严禁使用尖硬的物品或具有研磨作用的物品如去污粉等，清洁浴缸及护罩表面，因其可能腐蚀、划伤浴缸表面，从而降低表面光泽。
- 5、亚克力浴缸可以抵御绝大多数常用家用化学品的侵蚀，但仍应避免与油漆，油漆清除剂如氯仿和丙酮等强有机溶剂接触。如果它们与浴缸表面接触，将可能引起表面软化，溶化或龟裂。
- 6、严禁将燃着的烟头放在浴缸表面上，否则将留下燃烧的疤痕。
- 7、严禁将灯泡，明火放置在浴缸内，以免造成表面破损。

以下是对划伤的建议：

- (1) 如果浴缸表面有轻微的划伤或擦痕，可在划伤处喷上金属抛光剂或汽车抛光剂，用电动抛光机磨抛来重新获得光亮表面。
- (2) 如果是较深的划伤，可先使用2000 #水砂纸擦去划痕，然后用上述的方法来获得光亮表面。

4. No hard stuff or abrasive stuff like cleaning powder are allowed to clean bathtub, as that would corrode, scratch and dull bathtub surface.
5. Do not allow paint, paint remover like chloroform or any strong organic solvent like acetone in contact with any bath surfaces, or bathtub surface would be softened, melted or crackle.
6. Do not place flaming cigarette on bath or it would burn bathtub surface.
7. NO bulbs and open fires are allowed to place in bathtub lest bathtub surface is damaged.

Suggestion to remove scratch:

- (1) If scratch is slight, spray metal polish or car polish on scratch at first, and then use electric polishing machine to resume glossy surface.
- (2) If scratch is deep, use 2000# abrasive paper to remove scratch at first, and then use same method as (1) to resume glossy surface.



特别申明

SPECIAL STATEMENT

本产品说明书是根据最新产品资料编写而成，本公司遵循可持续发展策略，对产品的规格、性能等进行持续的改进，如有变更，恕不另行通知。（本公司保留此项解释权）

The products installation instruction is written in accordance with the latest product information, following the sustainable development strategy of the Company, to improve continually the produce's specification, performance etc., subject to change without notice. (The Company reserves the right to interpret)